

BT07 User Manual V1.4



1 Product overview

BT07 is Bluetooth Low Energy temperature data logger with the latest Bluetooth 5.0 technology. It can collect temperature of the surrounding environment. Such data can be recorded as history data. BT07 can store up to 8640 pieces of the temperature data. Mobile phone with Bluetooth 4.0 or above can download and install App. It can store and monitor temperature of the environment comprehensively. Its characteristics are small-sized, low-weighted, easily portable, highly accurate for wide use in cold chain logistics, etc.

2 Product application

1. Refrigerated storage and transportation;
2. Pharmaceutical environment;
3. Fresh transport;

3 Product features

1. High accuracy and stability;
2. small-sized, low-weighted,easy to carry and stick;
3. Bluetooth 5.0;
4. Built-in highly sensitive temperature sensor;
5. It can store 8640 pieces of temperature data(when the storage space is full, the first 512 pieces of data will be overwritten);
6. History report can be sent to specified email;
7. By pairing Bluetooth printer to print the data report;

4 Product specification

Item	Specification
Protocol standard	Bluetooth 5.0
Send interval	2s, adjustable
Built in battery	160mAh /3V(can't replaceable)
Output power	-4dBm, adjustable
Transmission distance	110 meters, adjustable
Storage	Can be save 8640 temperature data
Operating temperature range	-10°C~ +50°C
Temperature detection accuracy	±0.5°C
Temperature resolution	0.1°C
Temperature refresh frequency	5s
Record Interval	10min, adjustable
Alarm Range	2°C~8°C, adjustable
Battery life	6 months(default setting,Normal temperature 25°C)
Shelf life	1 year
Net weight	9g
Outline size	84mm*64mm*1.8mm

5 Caution

1. Being close to a metal object will interfere with the signal, causing the signal to be weaken;
2. Note the distance between BT07 and the receiver to guarantee the accuracy of receiving;
3. Keep away from corrosive objects;

6 Switch Instructions

Device status	Operation	Indicator Status	Instructions
Turn on	Under unopened state, long press button for 3 seconds	Green light bright for 3s	Turn on the device, start send the real-time data,,then start record the data.(the recording is enabled by default. If the recording is disabled through the APP, also needs to be enabled through the APP)
Turn Off	Under Open state, long press the button for 3 seconds	Red light bright for 3s	Turn off the device
initialization	Under Open and not start record state,short press the button for less than 3 seconds	Green and red lights bright once at the same time	The device has been started and is in the initialization state after the configuration is saved(If Save configuration startup record is not selected).need to start recording data through APP

Device status	Operation	Indicator Status	Instructions
Query data record status	Under open state, short press the button for less than 3 seconds	Green light bright once	The device has been started and is in the recording or stopping state, and does not alarm
Shorten the broadcast time		Red light bright once	The device has been started and is in the recording or stopping state, and alarms
		Green and red lights bright once at the same time	The broadcast is switch to 0.5 second interval to speed up the connection for 60 seconds, then back to the preset broadcast interval

7 APP

‘Temp Logger’ is a free mobile applications which provided by our company to the users, can connect the BT07 through the Bluetooth of the mobile devices and do the settings,data transmission, recording, synchronization, send to email. Apply the Bluetooth BLE way, so you can use phone for temperature monitoring.
download the Android or IOS APP, please do as follows:


Android download: (Support Android 8.0 or newer)

Method 1: Into Google Play and type "Temp Logger App";

Method 2: Scan the following QR code;




IOS download:Into Apple APP Store and type “ Temp Logger App”
(Support iOS 14.0 or newer)

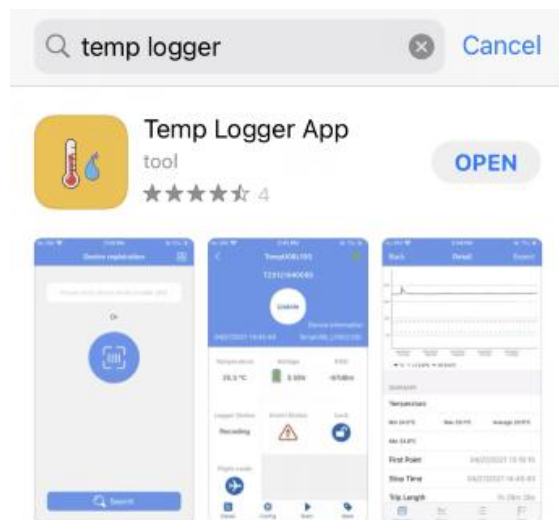


7.1 Device Registration

7.1.1 Open the APP, enter the device ID directly to register on the homepage, or scan the bar code to get the device ID, or do not enter any ID and directly click search to find the device .

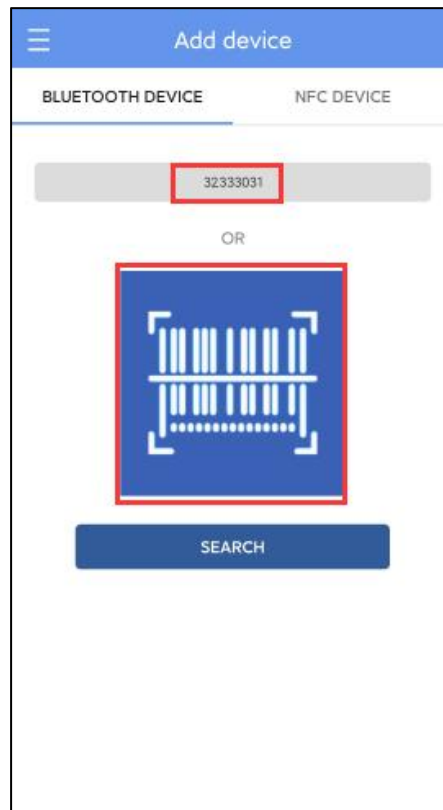


7.1.2 Enter the device connection page and click Connect. After a successful connection, the device ID will be displayed on the "Devices" page, indicating that the device has been registered successfully .

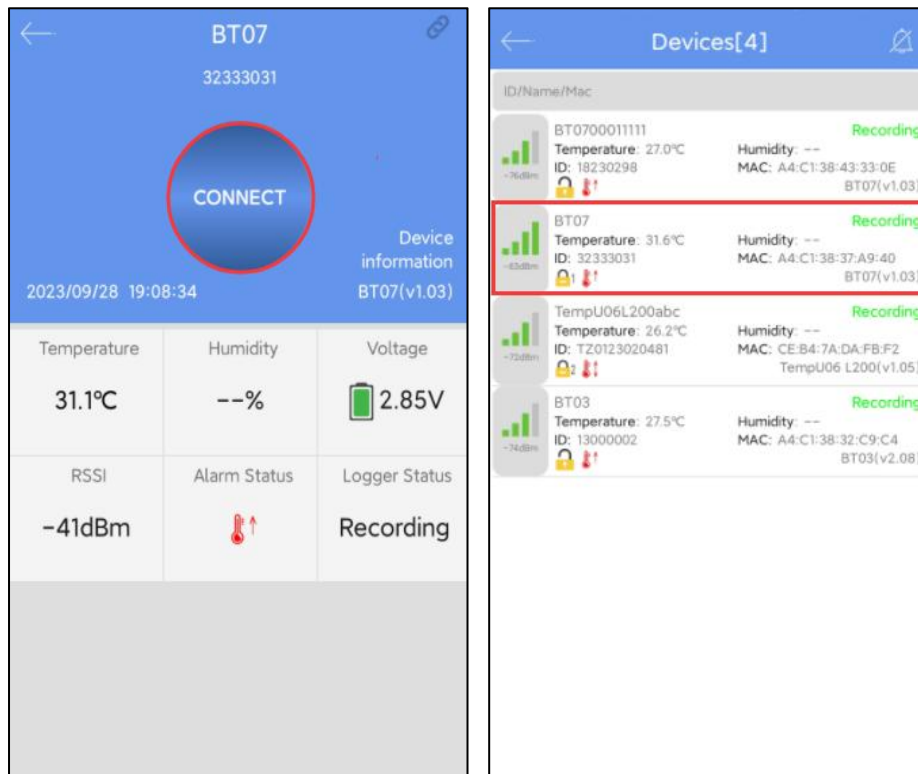


7.2 Device View

Click the icon in the upper left corner of the home screen to expand the main menu. You can select the menu function and click “device” to enter the multidevice interface. The functions of the device interface are as follow:

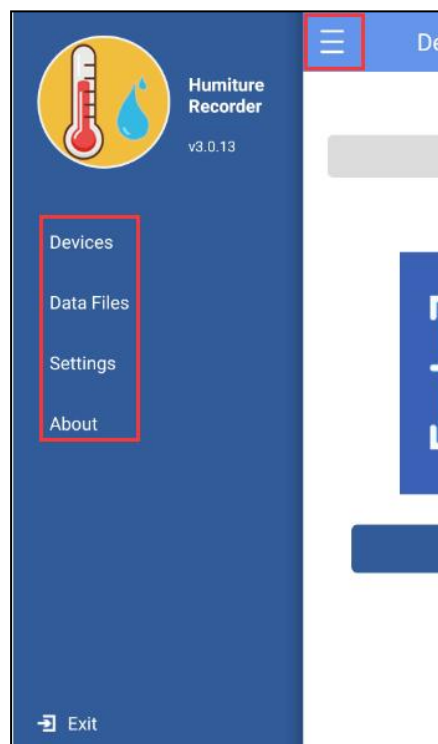



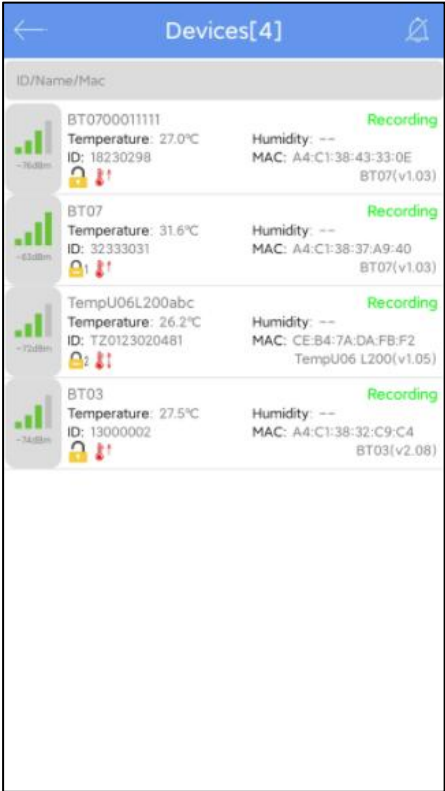

7.2.1 To view device information

The name, ID, MAC, temperature data, model, and status of all the current devices can be viewed, or you can view the specific device information by ID, name, and MAC.




Status description of the device in different symbols:

Temperature icon display	Status
	Temperature normal
	Upper temperature alarm
	Lower temperature alarm
	Upper and lower temperature alarm


7.2.2 Delete the device:

Long press to delete the device:

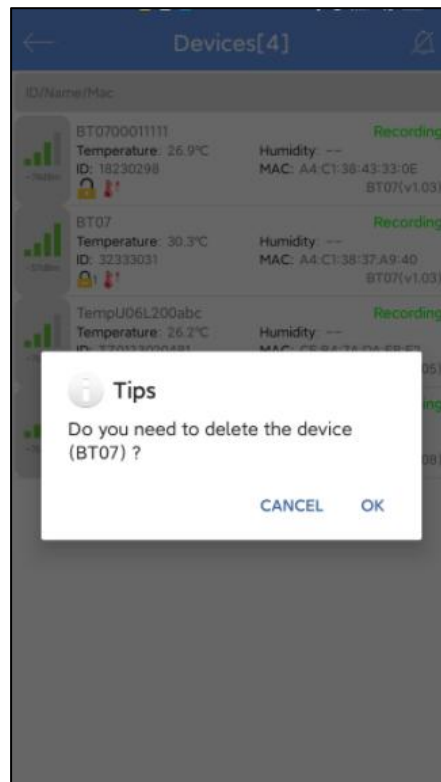


7.2.3 Device alarm:

When the device exceeds the preset upper or lower limit, the alarm information will be displayed, and the alarm bell will ring. Clicking "CLOSE " to turn off the alarm information and alarm bell.

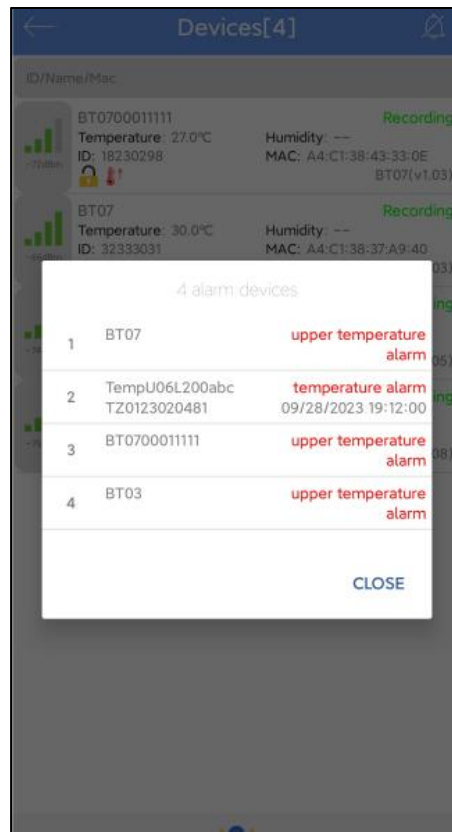

7.3 Device connection

Click a single device quickly to enter the connection interface. It will display the temperature, voltage, RSSI, alarm status and logger status of the device. Click "CONNECT," and jump to update after the connection is successful, indicating that the device has been successfully connected and read the current data content. After the connection is successful, it will prompt you whether to view the report, or the access key and clear of the device will be displayed. three buttons will be displayed at the bottom of the interface:

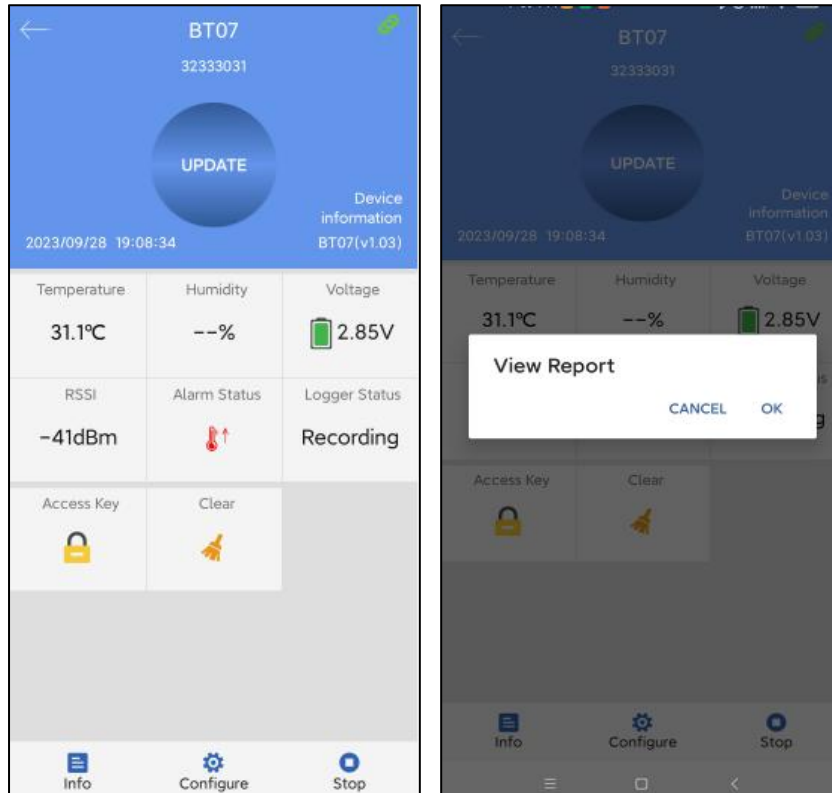

Note: The device will not update the data in the connection process. By default, the device will be disconnected after 90 seconds.

7.3.1 Device access key

Click "Access Key" to encrypt the device, and set the level-1 and level-2 access keys, the password is disabled by default.


7.3.2 Clear data

Click "Clear" to delete all data stored on the device.


7.3.3 Detail and email/print/selection period report function

Click "Detail" to view all information reports of the device. Click "EXPORT" to generate PDF and CSV reports, and send the reports to the designated mailbox by email. Click "Print" to automatically search the name of Bluetooth printer. Click the name to automatically pair and print the data report. Click the upper right corner to select the time period to generate the report.

A: Details summary

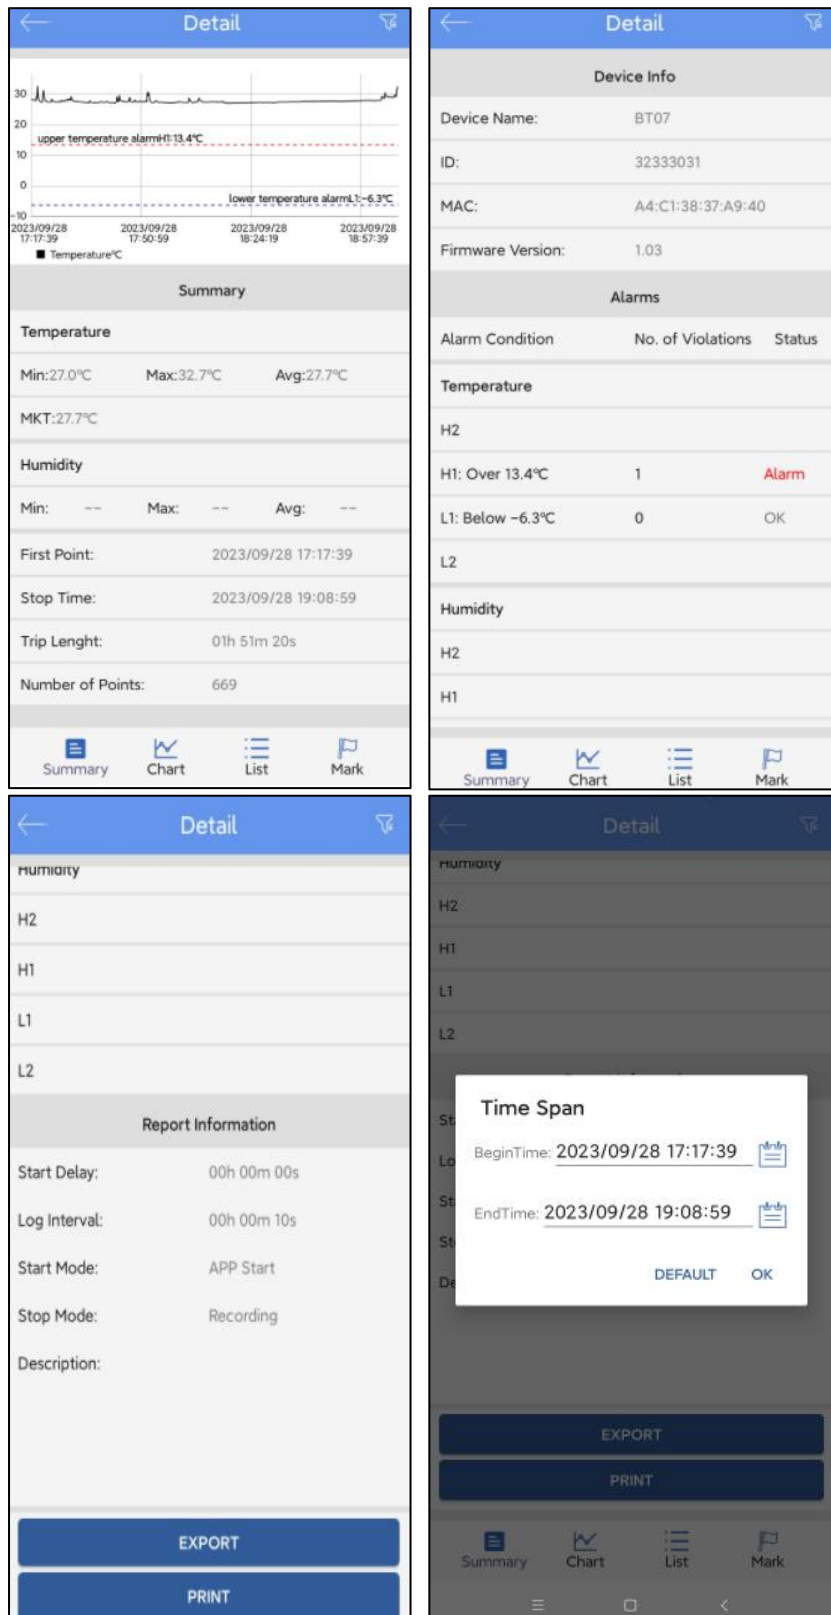

Note: 1.The smartphone must have a mailbox APP and login account to send email.
 2. The Bluetooth printer designated by our company must be connected.the Bluetooth name is "MTP-II" and the password is "0000".
 3. Only the Android APP has print function.
 B: Chart:

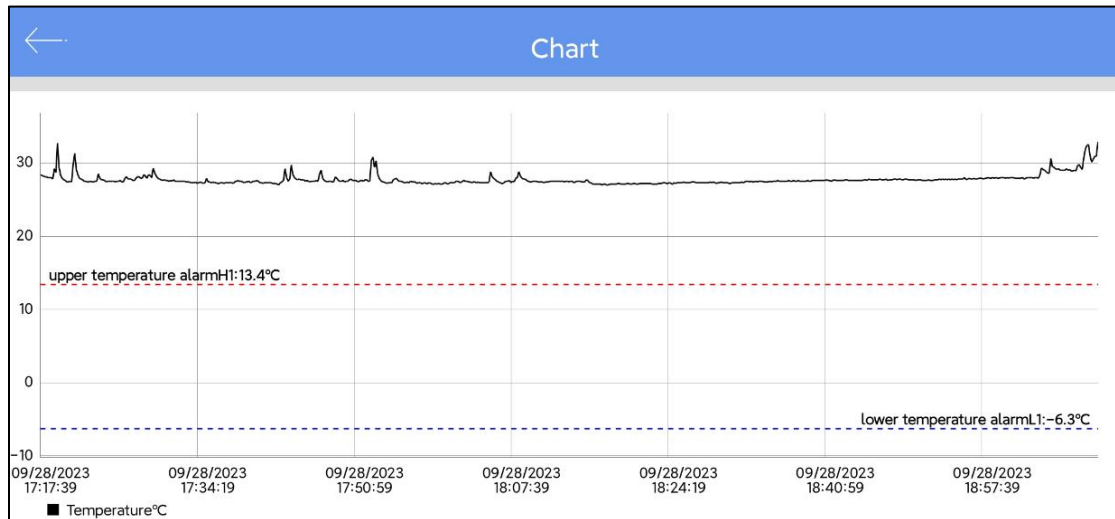

C: List:

List			
NO.	DateTime	Temperature	Humidity
1	09/28/2023 17:17:39	28.4°C	--
2	09/28/2023 17:17:49	28.3°C	--
3	09/28/2023 17:17:59	28.2°C	--
4	09/28/2023 17:18:09	28.1°C	--
5	09/28/2023 17:18:19	28.1°C	--
6	09/28/2023 17:18:29	28.0°C	--
7	09/28/2023 17:18:39	28.0°C	--
8	09/28/2023 17:18:49	28.0°C	--
9	09/28/2023 17:18:59	27.8°C	--
10	09/28/2023 17:19:09	29.2°C	--
11	09/28/2023 17:19:19	28.7°C	--
12	09/28/2023 17:19:29	32.7°C	--
13	09/28/2023 17:19:39	29.4°C	--
14	09/28/2023 17:19:49	28.3°C	--
15	09/28/2023 17:19:59	27.9°C	--
16	09/28/2023 17:20:09	27.7°C	--
17	09/28/2023 17:20:19	27.6°C	--
18	09/28/2023 17:20:29	27.4°C	--
19	09/28/2023 17:20:39	27.4°C	--
20	09/28/2023 17:20:49	27.5°C	--

7.4 Configure device

After connection, when the device does not start recording, you can click "Configure" to set the device.

The screenshot shows a mobile application interface titled "Configure Device". At the top, there is a back arrow and the title. Below the title, the device ID "BT07" and a serial number "32333031" are displayed. The "Device Name" field is set to "BT07". The "Temperature unit" section has two radio buttons: "°C" (selected) and "°F". The "Basic Settings" section includes "Broadcast Interval" set to 2 seconds, "Transmit Power" set to -4 dBm, "Logging Interval" set to 00 hours, 00 minutes, and 10 seconds, and "Logging Cycle" set to 1 Day. The "Advanced Settings" section has "Access Key" set to ON. The "Alarms" section has a link to "Alarm Setting". The "Description" section is empty. At the bottom, there is a "Save" button with a floppy disk icon.

7.4.1 Device name: The device name can be modified (up to 15byte) by users.

7.4.2 Temperature unit: Celsius(°C)/Fahrenheit(°F)

7.4.3 Basic settings:

A: Broadcast interval: The device broadcast interval (range: 0s ~30s, default:2s),

B: Transmission power: The device transmission power(range:-20dbm~4dbm, default:-4dbm).

C: Logging interval: Record time of the stored data (range:10s~18h, default:10mins).

D: Logging cycle : It changes with the logging interval.

7.4.4 Advanced settings:

A: Access key: The password is configurable and disabled by default (Range: 6digits).

7.4.5 Alarms:

Temperature(Range: -10~50 °C)

H1: High temperature limit:8°C

L1: Low temperature limit:2°C

7.4.6 Description: You can set a description for this device (up to 110 characters).

7.4.7 Save the configuration and then start the record:

Select Enable:Click “Save” will automatically start the record.

Select Disable:Click “Save” will not automatically start the record.

Note: Click “Save”, historical data will be deleted.


7.5 Start/Stop recording



To start/stop recording by clicking "Start"/"Stop" on the APP.

Note: Once clicking "Start", historical data will be deleted.

7.6 Data files

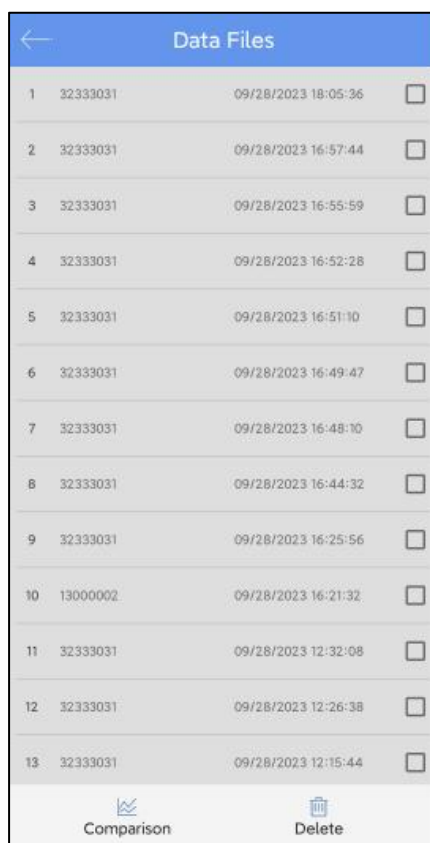Click the "Data Files" menu bar to enter to the data files interface. The functions of the device interface are as follows:



Data Files			
1	32333031	09/28/2023 18:05:36	<input type="checkbox"/>
2	32333031	09/28/2023 16:57:44	<input type="checkbox"/>
3	32333031	09/28/2023 16:55:59	<input type="checkbox"/>
4	32333031	09/28/2023 16:52:28	<input type="checkbox"/>
5	32333031	09/28/2023 16:51:10	<input type="checkbox"/>
6	32333031	09/28/2023 16:49:47	<input type="checkbox"/>
7	32333031	09/28/2023 16:48:10	<input type="checkbox"/>
8	32333031	09/28/2023 16:44:32	<input type="checkbox"/>
9	32333031	09/28/2023 16:25:56	<input type="checkbox"/>
10	13000002	09/28/2023 16:21:32	<input type="checkbox"/>
11	32333031	09/28/2023 12:32:08	<input type="checkbox"/>
12	32333031	09/28/2023 12:26:38	<input type="checkbox"/>
13	32333031	09/28/2023 12:15:44	<input type="checkbox"/>
<div> Comparison  Delete</div>			

7.6.1 To View a single data file

The time displayed in this file is the time when the device data is read for the first time. The information will be updated after each read until the machine stops recording.

7.6.2 Chart report comparison supporting up to 5 files


Check the data file and click "Comparison" to compare the temperature chart reports of different data files.

7.6.3 Delete data file

Check the data file and click "Delete" to delete the data file.

7.7 System setting

Click the "System setting" menu bar to enter the system setting interface. The functions of the system setting interface are as follows:

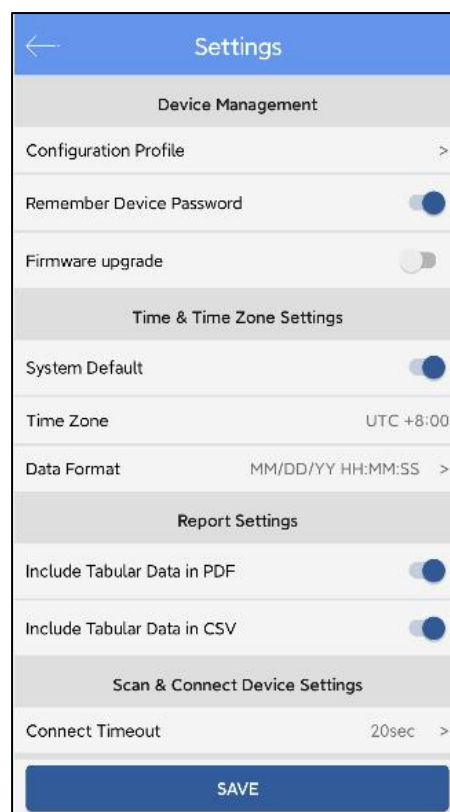

7.7.1 Device Management:

1. Configuration file: You can view the configuration file saved in "Configure".
2. Remember the device access key:
Don't turn on the switch: enter the access key every time you connect the device
Turn on the switch: when connection the device, you only need to input the access key once (default: remember the key)
3. The firmware update:
Don't turn on the switch: Firmware upgrades are not allowed
Turn on the switch: After connection, there is firmware upgrade function(default)

7.7.2 Time&Time zone Setting(Only for generating reports through the APP):

1. System default/Time Zone:

Don't turn on the switch: is UTC time zone or another time zone as you choose

Turn on the switch: is the current time zone of the system (default: system default)

2. Data Format: MM/DD/YY HH:MM:SS(default) or DD/MM/YY HH:MM:SS

7.7.3 Report settings(Only for generating reports through the APP):

1. Include Tabular Data in PDF: Select include or exclude (default: include).

2. Include Tabular Data in CSV: Select include or exclude (default: include).

7.7.4 Scan and connect device Settings:

A. Connection Timeout: If there is no connection within the specified time, it is considered as connection timeout(default: 20 seconds).